

A-01 Quick User Guide

Description of basic functional characteristics

- The password is fixed 6 digits, 1 user code & 1 management code ;
- To reset Password: After password modification, the
- Password (only password) can be initialized and restored on the zinc alloy lock.
- Note : Only password can be reset to factory state. Other function can be change.
- 4, The modification of the user code and the management code need to be implemented with the management code. ;
- 5, You can set a delay of 0-59 minutes to unlock. Acousto-optic cues every 10 seconds during delay
- 6, 4times: lockout for 5 minutes Automatically lock keypad and acousto-optic prompt at intervals of 5 seconds
- 7, Under voltage alarm ;

★1、Setting user codes

Step 1: Enter manager code, hold and keep the last number of passwords don't release in, light flashes and two beeps, until the second light and sound release your hand in 3 seconds.

Step 2: Enter "1" The light will flash and beep2X.

Step 3: Enter your new password. The light will flashes and beep2X,

Step 4: Enter your new password. The light will flash and beep2X。

★2、To change the manager code

Step 1: Enter0-0-0-0-0-0,

Step 2: Then enter the original management code (factory code 123456) ,

Step 3: Enter the new (6-digits) management code

Step 4: Enter the new (6-digits) management code

★3、Lockout time setting (lockout 5minutes)

Step 1: Enter manager code, hold and keep the last number of passwords don't release in, light flashes and two beeps, until the second light and sound release your hand in 3 seconds.

Step 2: Enter "8" The light will flash and beep2X.

Step 3: Enter "2". The light will flash and beep2X ("3"3minutes, "4" 4 minutes)

Note : Use reset button can be set 5 minutes again.

★4、Time Delay setting

Step 1: Enter manager code, hold and keep the last number of passwords don't release in, light flashes and two beeps, until the second light and sound release your hand in 3 seconds.

Step 2: Enter "9" The light will flash and beep2X.

Step 3: Enter "00-59". The light will flash and beep2X ("01"1minutes, "04" 4 minutes)

Note : Use reset button can't set time please set according above steps.

★5、Low power alarm

Enter the correct code when you enter the last number will hear **SERIES OF MULTIPLE BEEPS.**

★7、 Step 1: Disconnect the battery from the Entry Pad and the lock cable from the lock body

Step 2: Locate the Reset button on the back of the lock body

Step 3: Using a poke tool (paper clip or similar) depress the Reset button 3-4 times. This dissipates any latent energy in the

System's capacitors, and readies the lock for reset.

Step 4: Depress the Reset button and HOLD

Step 5: Continuing to HOLD the Reset button down, connect the lock cable to the lock body

Step 6: Continuing to HOLD the Reset button down, connect the battery to the Entry Pad

Step 7: Continue to HOLD the Reset button down for 5 seconds

Step 8: Release the Reset button